

# EOS 6D

EOS 6D (WG)

EOS 6D (N)

## Pocket Guide

This quick guide explains basic function settings and how to shoot and play back images. You can take this guide with you for shooting. For detailed instructions, refer to the Camera Instruction Manual (CD-ROM).



English Edition  
© CANON INC. 2012

### Quick Start Guide

**1** **Insert the battery.**

**2** **Insert a card.**  
With the card's label facing toward the back of the camera, insert it into the card slot.

**3** **Attach the lens.**  
Align it with the red dot.

**4** **Set the lens focus mode switch to <AF>.**

**5** **Set the power switch to <ON>.**

**6** **While holding down the center of the Mode Dial, set it to <A+> (Scene Intelligent Auto).**

**7** **Focus the subject.**  
Aim the viewfinder center over the subject and press the shutter button halfway to autofocus.

**8** **Take the picture.**  
Press the shutter button completely to take the picture.

**9** **View the image.**  
The captured image will be displayed for 2 sec. on the LCD monitor.

The ☆ on the right of the function indicates that the function is available only in Creative Zone modes.

**Number of Possible Shots with Viewfinder Shooting**

Temperature	At 23°C / 73°F	At 0°C / 32°F
Possible shots	Approx. 1090 shots	Approx. 980 shots

### Image Playback

**Image Playback**

- Index
- Magnify
- Playback
- Erase
- INFO, Shooting information
- Select image

### Preparation

#### Menu Operations

**Menu Operations**

- Press the <MENU> button to display the menu.
- Press the <▶▶> key to select a secondary tab, then press the <▲▼> key to select the desired item.
- Press <SET> to display the setting.
- After setting the item, press <SET>.

#### Basic Zone Modes

**Basic Zone Modes**

**Menu items** **Menu settings**

#### Creative Zone Modes

**Creative Zone Modes**

#### Image-recording Quality

**Image-recording Quality**

- Select [Q1: Image quality], then press <SET>.
- Turn the <◀▶> dial or press the <▶▶> key to select the image-recording quality, then press <SET>.

Image-recording quality

- RAW: Turn the <◀▶> dial to select the quality.
- JPEG: Press the <▶▶> key to select the quality.

Image quality menu items:

- Image quality
- RAW
- MRAW
- SRAW
- JPEG
- Pixel recorded
- Possible shots

#### Picture Style

**Picture Style**

- Under the [Q4] tab, select [Picture Style], then press <SET>.
- Press the <▲▼> key to select a Picture Style, then press <SET>.

Style	Description
Auto	Color tones optimized for the particular scene.
Standard	Vivid colors and sharp images.
Portrait	Nice skin tones and slightly sharp images.
Landscape	Vivid blue skies and greenery and very sharp images.
Monochrome	Black-and-white images.

For <Neutral> and <Faithful>, refer to the Camera Instruction Manual (CD-ROM).

### Custom Functions

#### Quick Control

**Quick Control**

- Press the <Q> button.
- The Quick Control screen will appear.

Quick Control screen items:

- Shutter speed
- Aperture
- Flash exposure compensation
- AE lock
- Highlight tone priority
- ISO speed
- Wi-Fi function
- Custom Controls
- Image-recording quality
- Auto Lighting Optimizer
- Metering mode
- White balance bracketing
- AF point
- White balance correction
- Drive mode

- Press the <▲▼> or <▶▶> key to select a function, then turn the <◀▶> or <◉> dial to set it.
- In Basic Zone modes, the settable functions differ depending on the shooting mode.

#### Electronic Level

**Electronic Level**

- Each time you press the <INFO.> button, the screen display will change.
- Display the electronic level.

#### C.Fn I: Exposure

- Exposure level increments
- ISO speed setting increments
- Bracketing auto cancel
- Bracketing sequence
- Number of bracketed shots
- Safety shift

#### C.Fn II: Autofocus



- Tracking sensitivity
- Acceleration/deceleration tracking
- AI Servo 1st image priority
- AI Servo 2nd image priority
- AF-assist beam firing
- Lens drive when AF impossible
- Orientation linked AF point
- Superimposed display
- AF Microadjustment

#### C.Fn III: Operation/Others


- Dial direction during Tv/Av
- Focusing screen
- Multi function lock
- Warnings ! in viewfinder
- Custom Controls

# Shooting Operation


## Nomenclature

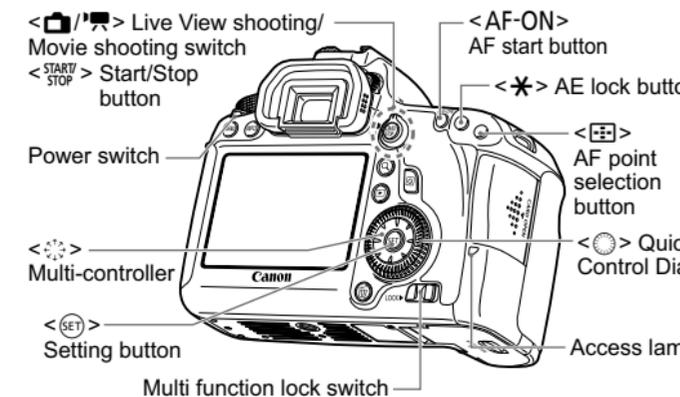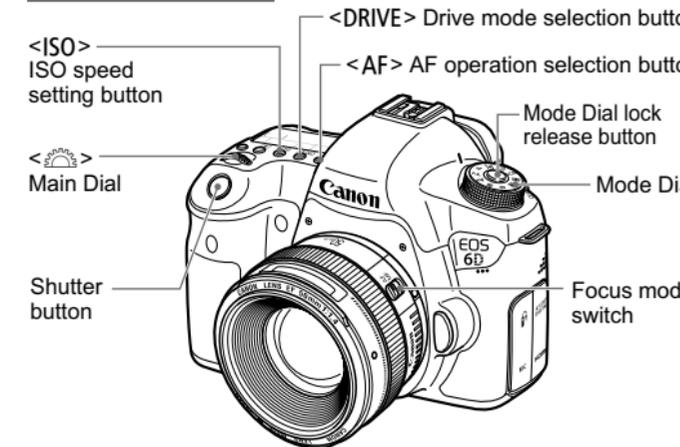


## LCD Panel

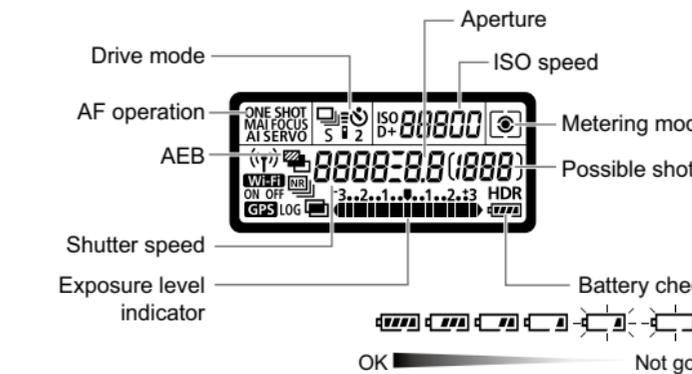

## Viewfinder Information

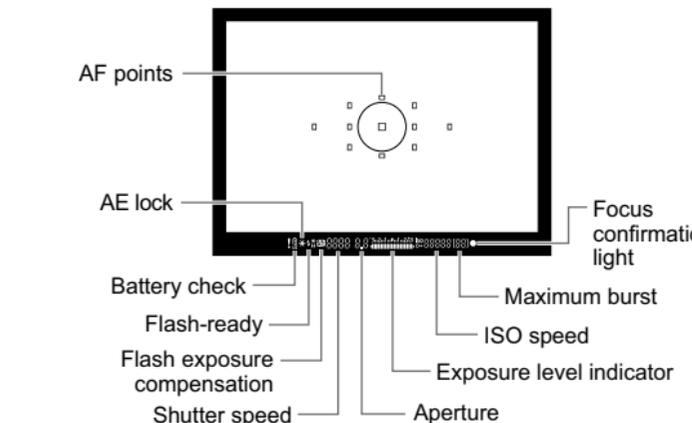


## Basic Zone Modes

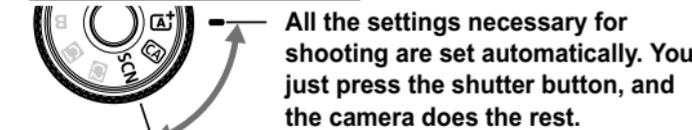

- [A+] : Scene Intelligent Auto
- [CA] : Creative Auto
- [SCN] : Special scene
  - [Portrait] : Portrait
  - [Landscape] : Landscape
  - [Close-up] : Close-up
  - [Sports] : Sports
  - [Night Portrait] : Night Portrait
  - [Handheld Night Scene] : Handheld Night Scene
  - [HDR Backlight Control] : HDR Backlight Control


## Creative Zone Modes

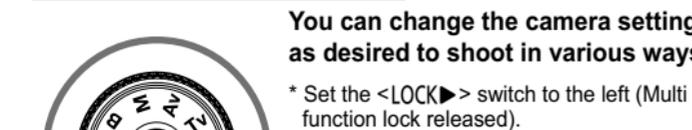

## P: Program AE


- Set the Mode Dial to <P>.
- The camera automatically sets the shutter speed and aperture in the same way as the <A+> mode.

## Tv: Shutter-priority AE

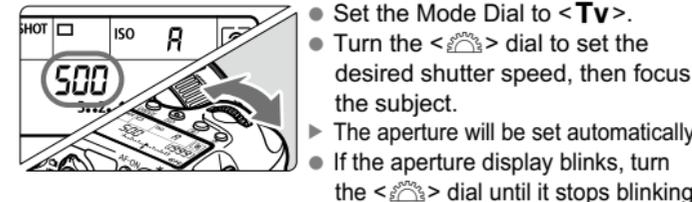


- Set the Mode Dial to <Tv>.
- Turn the <ISO> dial to set the desired shutter speed, then focus the subject.
- The aperture will be set automatically.
- If the aperture display blinks, turn the <ISO> dial until it stops blinking.

## Av: Aperture-priority AE

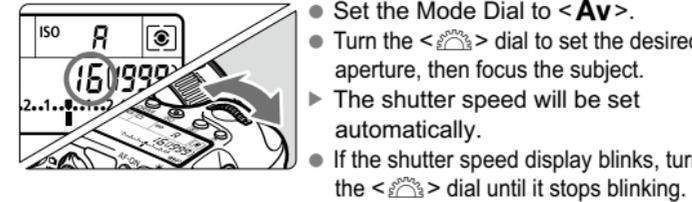


- Set the Mode Dial to <Av>.
- Turn the <ISO> dial to set the desired aperture, then focus the subject.
- The shutter speed will be set automatically.
- If the shutter speed display blinks, turn the <ISO> dial until it stops blinking.

## M: Manual Exposure

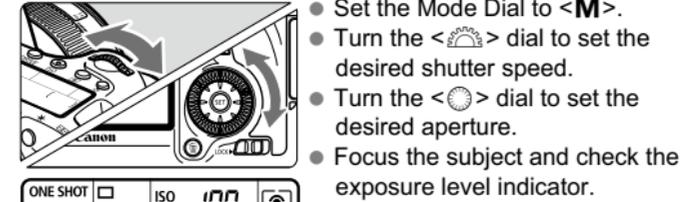


- Set the Mode Dial to <M>.
- Turn the <ISO> dial to set the desired shutter speed.
- Turn the <ISO> dial to set the desired aperture.
- Focus the subject and check the exposure level indicator.

## ISO: ISO Speed

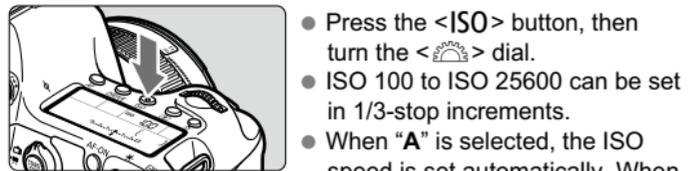


- Press the <ISO> button, then turn the <ISO> dial.
- ISO 100 to ISO 25600 can be set in 1/3-stop increments.
- When "A" is selected, the ISO speed is set automatically. When you press the shutter button halfway, the ISO speed setting is displayed.

## Drive Mode

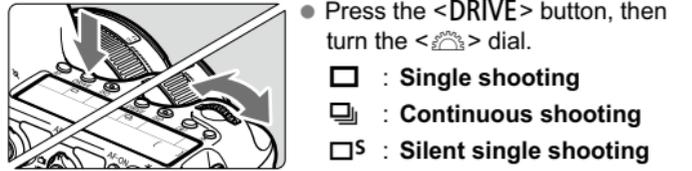

- Press the <DRIVE> button, then turn the <ISO> dial.
- Single shooting
- Continuous shooting
- Silent single shooting
- Silent continuous shooting
- 10-sec. self-timer/Remote control
- 2-sec. self-timer/Remote control


## AF: AF Operation

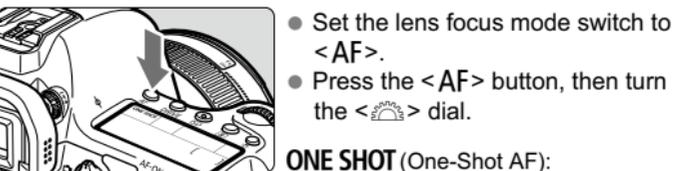

- Set the lens focus mode switch to <AF>.
- Press the <AF> button, then turn the <ISO> dial.


- ONE SHOT (One-Shot AF):** For still subjects
- AI FOCUS (AI Focus AF):** Switches the AF operation automatically
- AI SERVO (AI Servo AF):** For moving subjects

## AF Point Selection

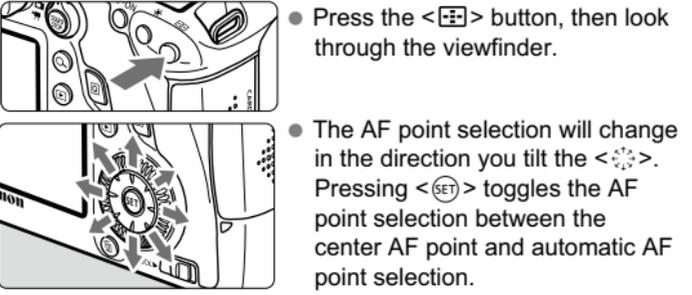


- Press the <AF-ON> button, then look through the viewfinder.
- The AF point selection will change in the direction you tilt the <ISO> dial. Pressing <SET> toggles the AF point selection between the center AF point and automatic AF point selection.
- The <ISO> dial selects an AF point in the horizontal direction, and the <ISO> dial selects an AF point in the vertical direction.


## Live View Shooting

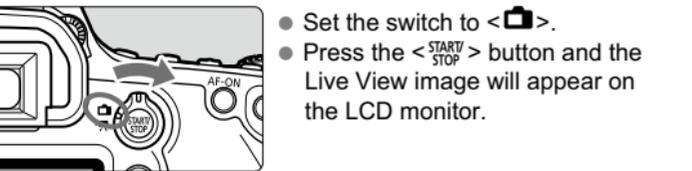

- Set the switch to <Live View>.
- Press the <START/STOP> button and the Live View image will appear on the LCD monitor.

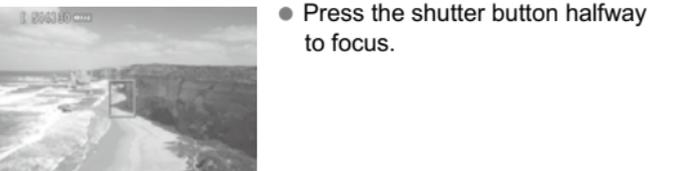

- Press the shutter button halfway to focus.

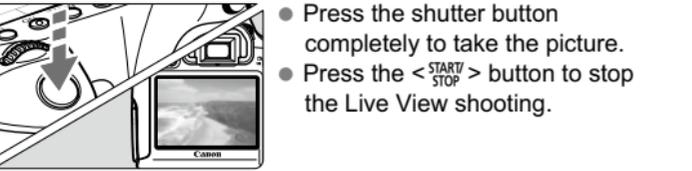


- Press the shutter button completely to take the picture.
- Press the <START/STOP> button to stop the Live View shooting.


**Number of Possible Shots with Live View Shooting**

Temperature	At 23°C / 73°F	At 0°C / 32°F
Possible shots	Approx. 220 shots	Approx. 190 shots


## Shooting Movies

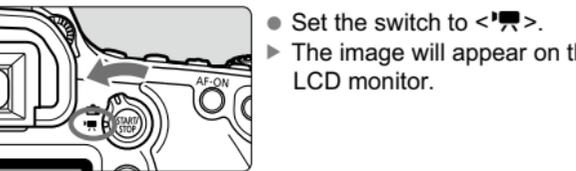

- Set the switch to <Movie>.
- The image will appear on the LCD monitor.

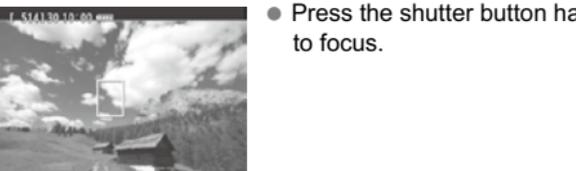

- Press the shutter button halfway to focus.

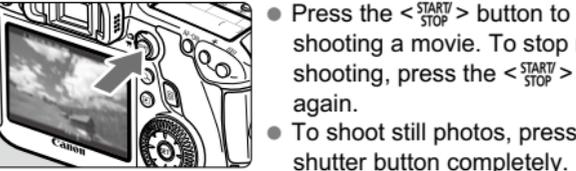

- Press the <START/STOP> button to start shooting a movie. To stop movie shooting, press the <START/STOP> button again.
- To shoot still photos, press the shutter button completely.

- When the shooting mode is <M>, you can shoot movies with manual exposure.
- You can set movie shooting settings with the menu options under the [C1] or [C2] tab.